


Back to wall bidet

bathco

info@bathcogroup.com

Oropesa  
Ref. 4564

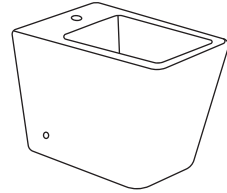

## INSTALLATION INSTRUCTIONS

Before proceeding with installation, please read these instructions carefully to familiarise yourself with the required tools, materials and installation sequences. Please leave these instructions for the consumer after installation.

Prior to installation, inspect the toilet to ensure that no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation, and advise your supplier immediately.

**CAUTION:** risk of personal injury or product damage. Handle with care. Porcelain can be broken or chipped if the product is handled carelessly.

- Observe all local plumbing and building codes.
- Carefully inspect the new toilet for damage.
- If the existing toilet does not have a supply shut-off valve below the cistern, install one before installing the new toilet.

## Tools and material required




Tape measure



Level



Safety glasses



Pencil




Screwdriver




Caulking gun

## Installation


- 1** Position pan against wall and mark off pan fixing holes on floor.

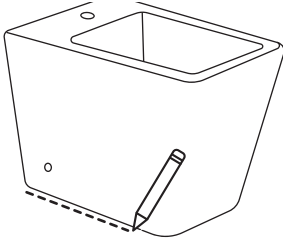


- 2** Fix brackets and water inlet.

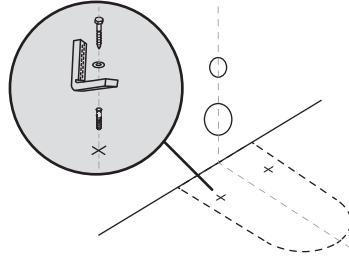


- 3** Ensure that you make a firm connection with inlet and outlet pipes and avoid disturbing the floor fixing brackets.

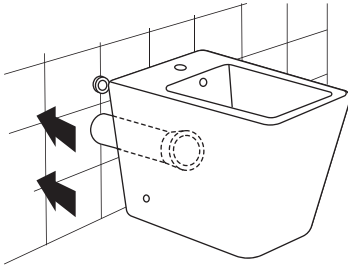

- 4** Insert the washer in the anchor hole of the pan. Then tighten the mounting screw and then put the cap.

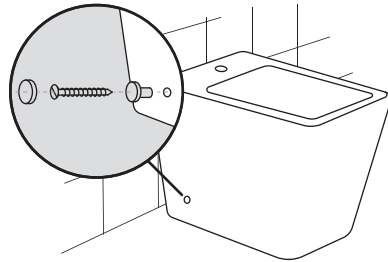

- 5** Ensure than pan is level.

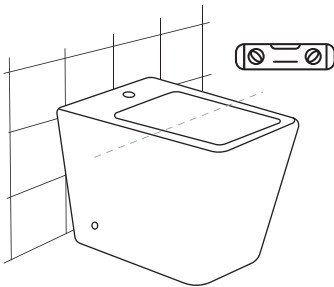

- 6** Fix pan to floor using fixing screws and flexible sealant.

